
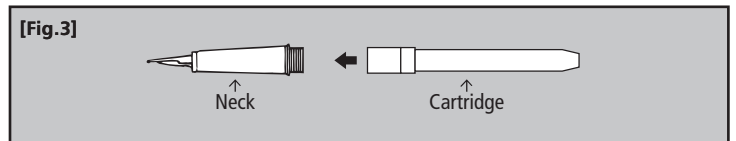
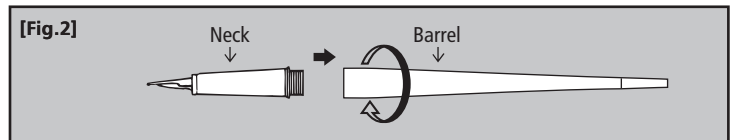


Desk Pen / Use and Care Guide

How to fill with ink

■ Ink cartridge




- (1) Always remove the cap before refilling. **[Fig.1]**
Inserting cartridge strongly with cap on could cause misalignment of the neck and cap resulting in damage.
- (2) Unscrew the neck from the barrel. **[Fig.2]**
- (3) Remove the empty cartridge from the neck while holding the neck with the nib pointing up.
- (4) Position the cartridge facing upward. Keeping the cartridge straight push it into the pen in the direction of the arrow without rotating it. Put it in straight without turning or twisting, otherwise the valve may not open. **[Fig.3]**
- (5) Reassemble the barrel and cap.

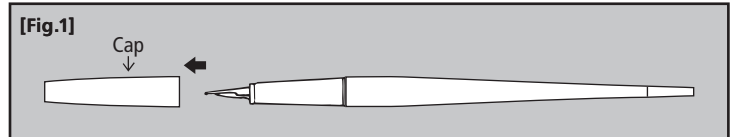

■ Converter type (separately sold)

<Rotation type Converter>

- (1) While holding the neck with the nib pointing up, unscrew the neck from the pen barrel and then insert the converter firmly. **[Fig.4]**
 - (2) Rotate the knob of the converter counter-clockwise. **[Fig.5]**
 - (3) Dip the pen nib into the ink until the ink comes around the neck of the pen, rotate the knob of the converter clockwise to fill with ink. **[Fig.6]**
- * Be careful not to hit the bottom of the bottle with the nib point to protect the nib.

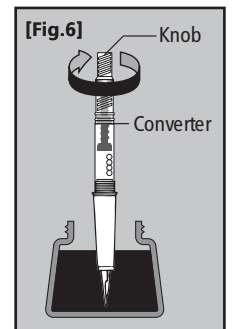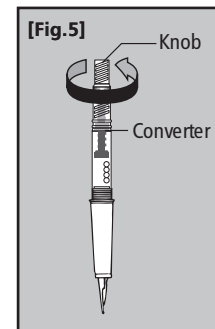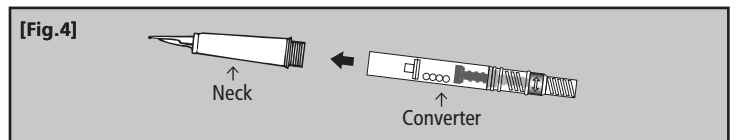

Remarks

- Please do not use this product for any purpose other than writing.
- Keep away from children.
- After use always replace the cap firmly.
- Inserting cartridge strongly with cap on could cause misalignment of the neck and cap resulting in damage.
- When using a desk pen with an ink cartridge for the first time, gently squeeze the cartridge with fingers to start the ink flow.
- Prevent ink from spilling by pointing the nib upward while replacing the cartridge.
- Please take care not to drop these desk pens since the shock could cause a malfunction.
- Please use PILOT ink (cartridge or bottled) for PILOT fountain pens.
Mixing other inks or old ink may cause problems.