


iro-utsushi / Use and Care Guide

【いろうつし】

A writing instrument with a fountain pen nib that allows you to write smoothly

How to use

- When using the pen for the first time, dip the nib in water and wipe it off with a cloth.
- To use the pen, dip the nib into the ink up to the round hole. **[Fig.1]**
- If the pen body becomes dirty with ink, wipe it with a cloth.
- When changing the ink colour, rinse the nib with water and wipe it with a cloth before using the next ink.

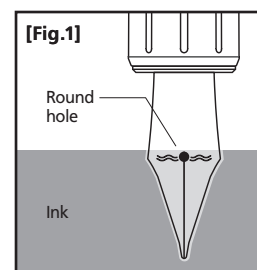

Remarks

- Only use the ink for writing.
- Do not place the ink in an area within reach of infants.
- The nib cannot be removed. Do not attempt to remove it.
- The nib is sharp. Please handle it with care.
- Cannot be used with cartridges or converters.
- Place the provided transparent nib cap after use.
- Do not expose to direct sunlight or place in hot areas.