


# Justus / Use and Care Guide

## How to adjust nib tension

 
Twist the Adjuster to the mark "H," the pen touch becomes harder, or to the mark "S," it becomes softer. **[Fig.1]**

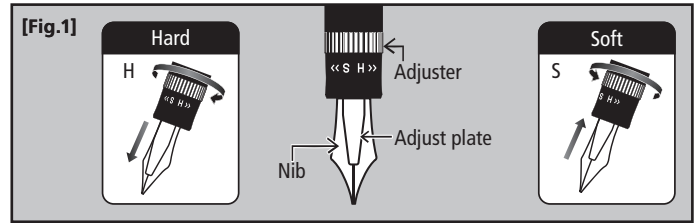

## How to fill with ink

### Ink cartridge

- (1) Unscrew the neck from the pen barrel.
- (2) Remove the empty cartridge from the neck while holding the neck with the nib pointing up.
- (3) Insert a new cartridge firmly. Position the cartridge facing upward. Keeping the cartridge straight




push it into the pen in the direction of the arrow without rotating it. Put it in straight without turning or twisting; otherwise, the valve may not open. **[Fig.2]**

\* When using an ink cartridge for the first time, remove the inserted converter.

### Piston type converter

 With this type of converter, the pen can be easily filled with ink by a simple operation of the knob on the converter. **[Fig.3]**

\* The oil for lubrication may be visible inside, but it does not affect the use of the pen.




- (1) Unscrew the neck from the pen barrel.

Dip the nib vertically into the ink until it is about halfway submerged. **[Fig.4]**

\* Be careful not to hit the bottom of the bottle with the nib point to protect the nib.

- (2) Press the knob five or six times to fill the ink tank with ink completely.

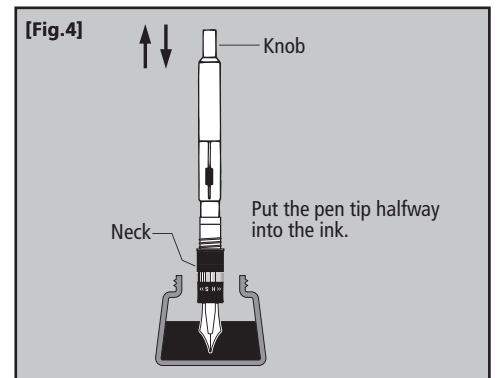

\* When you want to replace the converter with an ink cartridge, hold the neck of the pen with its nib pointing up and slowly remove the converter by slightly twisting it. Any ink remaining in the converter should be washed off with water. Dry the converter completely and store it.

\* When the bottle has little ink left in it, it can happen that the pen fails to absorb sufficient ink from the bottle. Refill inks from bottles that have a sufficient amount of ink remaining.

\* Any ink spilt on the neck or nib should be wiped off with either soft tissue paper or cloth before use.

## Remarks

- Please do not use this product for any purpose other than writing.
- Keep away from children.
- After use always replace the cap firmly.
- When starting to use a fountain pen with an ink cartridge for the first time, gently squeeze the cartridge to start ink flow.
- Prevent ink from spilling by pointing the nib upward while replacing the cartridge.
- Please avoid dropping the fountain pen or applying excessive force since the shock could cause it to malfunction.
- Pilot's Tsuwauro pigment ink for fountain pens is not compatible with this pen.
- Please use PILOT ink (cartridge or bottled) for PILOT fountain pens. Mixing other inks or old ink may cause problems.
- Do not turn the Adjuster forcedly when the Adjust plate is stuck onto the nib by dried ink.