


Do not use on official documents, addresses, or anything that should not be erased.

How to use

- The pen tip extends when the barrel is rotated sideways.
- To erase writing, twist off the top cap, and rub the writing with the eraser. **[Fig.1]**
- The ink color disappears when rubbed by the eraser.
- After using the eraser, be sure to securely reattach the cap.
- The replaceable eraser is not available for sale. If you need a replacement for the eraser, a repair is required. Please bring your pen to a PILOT retail store.
- Replace the ink refill by pulling the sheath out. **[Fig.2]**
- The compatible refill is the PILOT **LFTRF40UF** (0.38 mm).

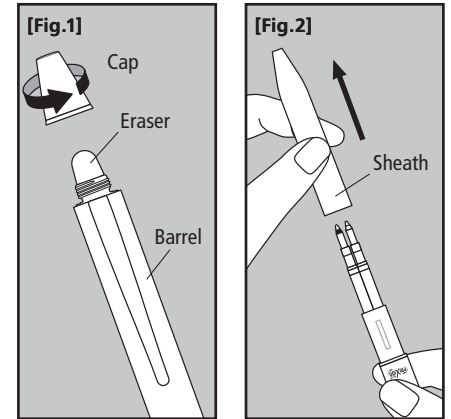

Remarks

- Please do not use this product for any purpose other than writing.
- Keep away from children.
- To prevent ink leakage, never write with the pen tip upwards.
- Avoid severe impacts or violent shaking because the ink may leak.
- Always retract the writing tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.
- Do not store in places exposed to direct sunlight or high temperatures. Do not keep at temperatures of 60°C or more, or the ink becomes colorless.
- At temperatures around -10°C or lower, the erased color may reappear and become visible again.
- Please do not use for writing on anything other than paper.
- Depending on the type of paper, such as thermal paper, or the characteristics of the printed paper, there could be cases where this erasure method cannot work properly.
- If rubbed by an eraser with stains, the surface of the paper would get dirty. Use the eraser after cleaning it off.