




Disappears when rubbed

FRIXION / Use and Care Guide

Do not use on official documents, addresses, or anything that should not be erased.

How to use


- The ink color disappears when rubbed by the special eraser at the end of the pen body.
- Ink becomes transparent with frictional heat.
- No eraser residue.
- Erase and rewrite repeatedly.

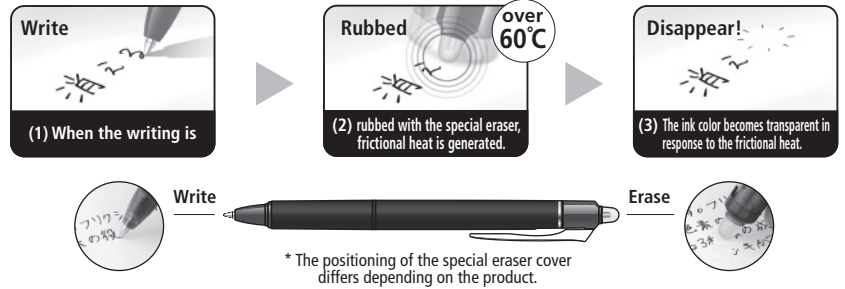

How to use FRIXION BALL KNOCK (Retractable Roller ball Pen)

- Click the clip [Fig.1]

* Please visit the FRIXION website given on the right for details on how to use other FRIXION Series products.

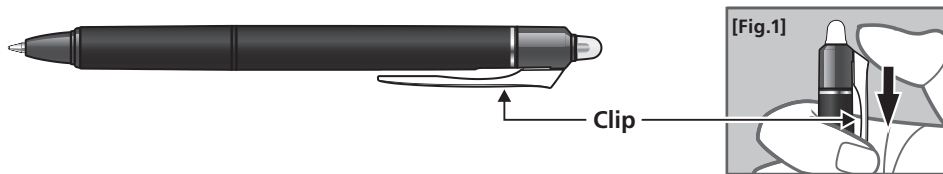

<https://www.frixion.jp>

Compatible refills

- To verify compatible refills, scan the QR code below or visit the URL provided.
- Bring the refills you have been using to the store when purchasing a new one.



<https://www.pilot-refill.jp/frixion>

Eraser rubber compatibility table Spare rubber parts are available only for the products listed below.

Product type	Product name	Item number	Compatible eraser rubber
Roller ball pen	FRIXION BALL KNOCK ZONE 05	LFBKZ-50EF	LFBKZRU10-5-color
		LFBKZ-2SEF/3SEF	LFBKZRU23-5B
	FRIXION BALL KNOCK ZONE 07	LFBKZ-50F	LFBKZRU10-7-color
3 color Roller ball pen	FRIXION BALL 3 SLIM 038	LKFBS60UF	LFBTSRU-10-color
	FRIXION BALL 3 SLIM 05	LKFBS60EF	
	FRIXION BALL 3 METAL / WOOD	LKFB-150EF/2SEF	LFBTRU-23-color
4 color Roller ball pen	FRIXION BALL 4 038	LKFB-80UF	LFBFRU-10-color
	FRIXION BALL 4 05*	LKFB-80EF-W,P,LB,CGD	LFBFRU-10-W,P,LB,CGD
	FRIXION BALL 4 05*	LKFB-80EF-B	LFBTRU-10-B
	FRIXION BALL 4 WOOD	LKFB-3SEF	LFBFRU-23-color

* Please note that spare rubber parts for the FRIXION BALL 4 05 (LKFB-80EF) are different by pen body color.

Products with eraser covers replaceable at point of repair

Product type	Product name	Article. No	Eraser rubber replacement
Roller ball pen	FRIXION BALL SLIM BIZ	LFBKS-1SUF	Repairs carried out when product entrusted to repairer
	FRIXION POINT KNOCK BIZ	LFPK-3SS4	
2 color Roller ball pen	FRIXION BALL 2 BIZ	LFBT-3SUF	
3 color Roller ball pen	FRIXION BALL 3 BIZ	LFBT-5SEF	

Remarks

- Do not use on official documents, addresses, or anything that should not be erased.
- Do not store in places exposed to direct sunlight or high temperatures. Do not keep at temperatures of 60°C or more, or the ink becomes colorless.
- At temperatures around -10°C or lower, the erased color may reappear and become visible again.
- Please do not use for writing on anything other than paper.
- Depending on the type of paper, such as thermal paper, or the characteristics of the printed paper, there could be cases where this erasure method cannot work properly.
- If rubbed by an eraser with stains, the surface of the paper can get dirty. Use the eraser after cleaning it off.
- Only use the ink for writing and drawing.
- Keep away from children.
- To prevent ink leakage, never write with the ballpoint pen tip upwards.
- Avoid severe impacts or violent shaking because ink may leak.
- Always replace the cap / retract the tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.