 




To use the eraser

Turn the knob in the direction of the arrow to remove the eraser.



To add lead refills

(1) Pull the knob straight out to insert the new lead refills.
(No more than four replacement refills should be inserted.)

(2) Push the knob into place until a click is heard.

 
Remarks

 
- Please do not use this product for any purpose other than writing.
- Handle with care because the point is sharp.
- Do not swallow the parts, such as the knob, eraser, and tip.
- Keep away from children.
- Do not store in places exposed to direct sunlight or high temperatures. Use PILOT lead refills.

For spare eraser, please use the PILOT HERFSS-10.

What to do when the lead is jammed

- (1) Twist the barrel and the grip to remove them. [Fig.1]
- (2) Hold the nipple with your fingers and twist the tip to remove it. [Fig.2]
- (3) Clear out the jammed leads.





2501