

Change the grip combination to find your best balance.

Dr.Grip®

PLAY BALANCE / Use and Care Guide

ENJOY YOUR BEST BALANCE!

Equipped with the Pure Fure mechanism.



Special webpage for the Dr. GRIP CL Play Balance



You can change the grip combination between two types to adjust the weight balance in eight different ways!

Examples of combination



Pattern 1

Total weight : 27.4g
The low center of gravity provides a stable writing feel.

- 1.HEAVY GRIP
- 2.HEAVY GRIP
- 3.HEAVY GRIP





Pattern 2

Total weight : 22.2g
Just the right weight and a smooth writing feel.

- 1.HEAVY GRIP
- 2.LIGHT GRIP
- 3.LIGHT GRIP

How to change the combination of the internal grip

- (1) Point the tip **downward**, twist to remove it, and then pull out the internal mechanism. [Fig.1]
- (2) Gently hold the outer grip and pull it off.
- (3) Next, freely change the internal grip combination to find your ideal balance. [Fig.2]
- (4) Securely attach the outer grip. Insert the internal mechanism while taking care not to let the lead fall out. Finally, place the tip to complete the process.

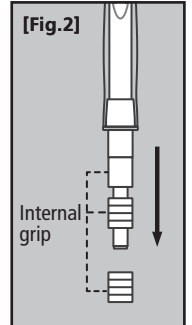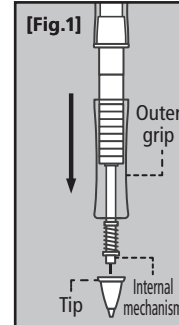

Remarks

- Please do not use this product for any purpose other than writing.
- Handle with care because the point is sharp.
- Do not swallow the parts, such as the knob, eraser, and writing unit.
- Keep away from children.
- Do not store in places exposed to direct sunlight or high temperatures.
- Use PILOT lead refills.
- For spare eraser, please use the PILOT **HERF-10**.