

BIRDIE switch / Use and Care Guide

How to use

■ How to use the mechanical pencil

For writing

- (1) Push the knob with the mouthpiece downward, and the lead comes out. [Fig.1]
- (2) When the lead is used up, press the knob repeatedly until the new one comes out.



 
After writing

The lead can be retracted by gently pushing the tip while pressing the knob. [Fig.2]



To refill lead

First, pull out the knob, followed by the ballpoint pen refill. Then, insert the mechanical pencil refill lead into the lead tank. [Fig.3]

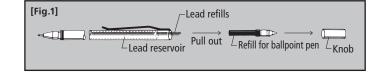

* No more than **four** replacement refills should be inserted to avoid jamming.

Please use only genuine PILOT products (0.5mm) for the mechanical pencil's lead refills.

■ How to use the ballpoint pen

(1) How to use

 
Removing the knob exposes the ballpoint pen refill. Be sure to attach the knob to the tip of the mechanical pencil to prevent it from being lost. [Fig.4]



(2) To replace the ballpoint pen refill

Remove the empty ballpoint pen refill and replace it with a new one. [Fig.5]

The compatible ballpoint pen refill is the PILOT BTRF-8F-B.

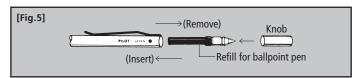

Remarks

- Please do not use this product for any purpose other than writing.
- Handle with care because the point is sharp.
- Do not swallow the parts, such as the knob and mouthpiece.
- Keep away from children.
- To prevent ink leakage, never write with the pen tip upwards.
- Avoid severe impacts or violent shaking because the ink may leak.
- When carrying this pen, be sure to attach the knob to the tip of the ballpoint pen. When the ballpoint pen refill is exposed, it can stain clothing. The ballpoint pen refill also serves as part of the mechanical pencil's extending mechanism. Therefore, keep an empty ballpoint pen refill in place, even if it is not replaced with a new one.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.
- Do not store in places exposed to direct sunlight or high temperatures.