

MULTIFUNCTION PEN / Use and Care Guide

One pen features both a ballpoint and a mechanical pen. A total of four types of PILOT Multifunction Pen series are available: Revolving Type, Click and Twist Type, Click and Button Type, and Slide Lever Type. Please refer to the proper Use and Care Guide before use.



Revolving Type (4+1/3+1/2+1)

● How to use the ballpoint pen

- (1) Turn the upper barrel to make the tip come out. Stop the rotation at the color you want.
- (2) To retract the tip, turn the upper barrel in the opposite direction of (1).

● How to use the mechanical pencil

- (1) Turn the upper barrel to make the mechanical pencil come out. Press the eraser cap to make the lead come out.
- (2) To retract the lead, press the lead onto the paper while pushing the eraser cap down.
- (3) To retract the writing unit to its original position, turn the upper barrel in the opposite direction of (1).
- (4) Unscrew the eraser cap to use the eraser.

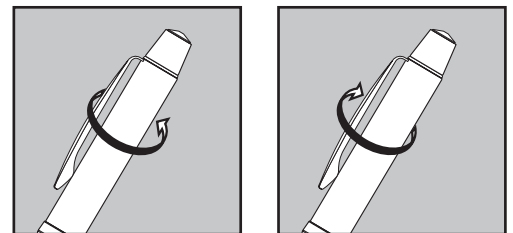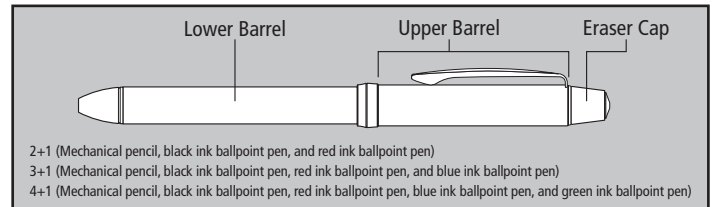



Lever Slide Type (4+1/2+1)

● How to use the ballpoint pen

- (1) Slide the lever with the indication mark (B or R) and a refill of the indication color (B=Black or R=Red) comes out.
- (2) To retract the tip, slide another lever.

● How to use the mechanical pencil



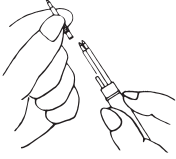
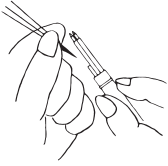
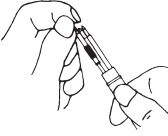

- (1) Slide the lever with the indication mark and the writing unit for the mechanical pencil comes out to be fixed. Press the cap to make the lead come out.
 - * In the case of 4+1 Wood, slide the clip down and the mechanical pencil comes out. Click the clip to make the lead come out.
- (2) To retract the lead, press the lead onto the paper while pushing the eraser cap down.
 - * In the case of 4+1 Wood, press the lead onto the paper while pushing the clip down.
- (3) To retract the writing unit, slide another lever.
- (4) Unscrew the eraser cap off to use the eraser.
 - * In case of 4+1 Wood, pull out the eraser cap.

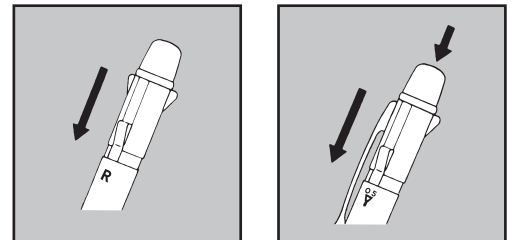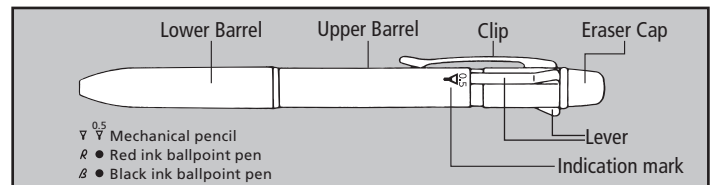

Replacing a ballpoint pen refill

(1) Unscrew the lower barrel to detach. * In the case of LEGNO and RiDGE, hold the upper barrel and pull out the lower barrel.	(2) Pull the empty refill out.	(3) Insert a new refill completely into the refill holder.	(4) Reassemble the pen by firmly screwing together the barrels. * For the Legno and Ridge, reattach the shaft to finish the process.

How to refill a mechanical pencil with new lead refills
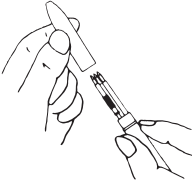
<p>(1) </p>	<p>(2) </p>	<p>(3) </p>
<p>Unscrew the lower barrel to detach. * In the case of LEGNO and RiDGE, hold the upper barrel and pull out the lower barrel.</p>	<p>Twist and extend the mechanical pencil.</p>	<p>Hold the pen in the upright position and pull the writing unit.</p>
<p>(4) </p>	<p>(5) </p>	<p>(6) </p>
<p>Drop in the replacement lead refills. * Inserting four or more lead refills may cause the guide pipe to clog.</p>	<p>Reassemble the pen by firmly screwing the lower barrel onto the pen.</p>	<p>Reassemble the pen by firmly screwing the lower barrel onto the upper part. * For the Legno and Ridge, reattach the shaft to finish the process.</p>

Refills for ballpoint pens and spare leads for mechanical pencils

- For ballpoint pen refills, please use the PILOT BRFS-10F (ball diameter 0.7 mm), BRFS-10EF (0.5 mm), or BRFS-10M (1.0 mm). For the Slide Lever type, please use PILOT refills BTRF-6F (0.7 mm), BRFS-10EF (0.5 mm), BRFS-10F (0.7 mm), BRFS-10M (1.0 mm), BVRF-8EF (0.5 mm), or BVRF-8F (0.7 mm).
- * The easiest way to find the right ballpoint pen refill is to bring the refill that you usually use as a sample.
- Please use only genuine PILOT 0.5 mm products for the mechanical pencil's lead refills.
There are 10 lead refills.

Remarks

- Please do not use this product for any purpose other than writing.
- Keep away from children.
- Do not swallow the parts, such as the knob, eraser, and writing unit.
- To prevent ink leakage, never write with the tip upwards.
- Avoid vigorous shaking or excessive force because this may damage the writing tip or pencil lead refills.
- Avoid severe impact or violent shaking because the ink may leak.
- Always retract the writing tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.
- Do not store in places exposed to direct sunlight or high temperatures.