

# LEGNO 2+1 0.7mm FINE 2 Colors Oil-based Ballpoint Pen (BLACK / RED) + Mechanical Pencil (0.5mm) / Use and Care Guide

## How to use

### <Mechanical pencil>

- (1) Slide the lever (gray) and the writing unit for the mechanical pencil comes out and is set in place.
- (2) Click the top of the pen to extend the lead.
- (3) The lead retracts by pressing the tip of the pen while pushing the top.
- (4) To retract the writing unit, gently slide the other lever.

### <Ballpoint Pen>


- (1) Slide the lever of the color you wish to use, and the tip comes out and is set in place.
- (2) To retract the writing tip, gently slide the other lever.

## How to replace a ballpoint pen refill

- (1) Unscrew and remove the mouthpiece.
  - (2) Slide the lever to push out the used refill and pull out.
  - (3) Firmly insert a new replacement refill all the way in.
  - (4) Slide one of the other levers lightly and retract the refill.
  - (5) Securely screw the mouthpiece back on to complete the job.
- \* Please only use the PILOT **BVRF-8F** (0.7 mm/Fine Acro-Ink) refills.

## How to refill a mechanical pencil with new leads

- (1) Unscrew and remove the mouthpiece.
  - (2) Slide the lever to push the writing unit out of the mechanical pencil, point the pen tip upwards, and pull out the mechanical pencil's writing unit. **[Fig.1]**
  - (3) Drop in the replacement lead refills. (No more than three replacement refills should be inserted to avoid jamming.)
  - (4) Firmly insert the mechanical pencil's writing unit all the way in.
  - (5) Slide one of the other lever lightly and retract the writing unit of the mechanical pencil.
  - (6) Securely screw the mouthpiece back on to complete the job.
- \* Please only use genuine PILOT lead refills (0.5 mm).

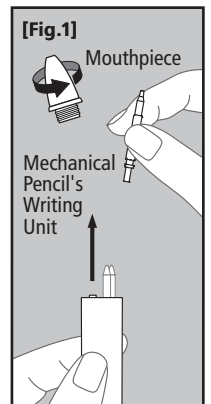

## Remarks

- Please do not use this product for any purpose other than writing.
- Handle with care because the point is sharp.
- Do not swallow the parts, such as the knob, eraser, and mouthpiece.
- Keep away from children.
- To prevent ink leakage, never write with the tip upwards.
- Avoid severe impacts or violent shaking because the ink may leak.
- Always retract the writing tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.
- Do not store in places exposed to direct sunlight or high temperatures.