

# 4+1 Wood / Use and Care Guide

4 Colors Oil-based Ballpoint Pen + Mechanical Pencil (BLACK / RED / BLUE / GREEN) + (0.5mm)

### How to use

#### <Mechanical pencil>


- (1) Slide the clip and the writing unit for the mechanical pencil comes out and is set in place. [Fig.1]
- (2) Press the top of the clip to make the lead come out. [Fig.2]
- (3) To retract the lead, press it back into the writing unit while holding the top of the clip completely down.
- (4) To retract the tip, slide another lever.
- (5) Take the cap off to get to the eraser.
- \* For a spare eraser, please use the PILOT HERFNS-10.

 
#### <Ballpoint Pen>

 
- (1) Slide the lever of the color you wish to use, and the tip comes out and is set in place.
- (2) To retract the tip, slide another lever.

 
# How to refill a mechanical pencil with new lead refills

- (1) While holding the grip, unscrew and remove the barrel.
- (2) Hold the pen upwards and pull out the writing unit. [Fig.3]
- (3) Drop in replacement lead refills. [Fig.4]
- (No more than three replacement refills should be inserted to avoid jamming.)
- (4) Firmly insert the mechanical pencil's writing unit all the way in.
- (5) Reassemble the pen by firmly screwing the barrels together.
- \* Please use only genuine PILOT products (0.5mm) for the mechanical pencil's lead refills.

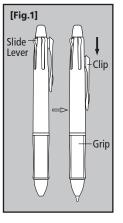







# Replacing a ballpoint pen refill

(1) While holding the grip, unscrew and remove the barrel.

- (2) Pull the empty refill out.
- (3) Firmly insert a new replacement refill all the way in.
- (4) Reassemble the pen by firmly screwing the barrels together.
- \* Please only use the PILOT BVRF-8 (Acro-Ink) ballpoint pen refills.

## Remarks

- Please do not use this product for any purpose other than writing.
- Handle with care because the point is sharp.
- Do not swallow the parts, such as the cap, eraser, and mouthpiece.
- Keep away from children.
- To prevent ink leakage, never write with the pen tip upwards.
- Avoid severe impacts or violent shaking, because the ink may leak.
- Always retract the writing tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.
- Do not store in places exposed to direct sunlight or high temperatures.