



# Acroball 2+1 Acroball 3+1/Use and Care Guide

 
#### How to use

 
### <Mechanical pencil>

- (1) 2+1: Press the light gray sliding lever down to make the tip of the mechanical pencil pop out and lock into place. [Fig.1]
  - 3+1: Press down the clip to make the tip of the mechanical pencil pop out and lock into place. [Fig.1]
- (2) Firmly press the top knob to release the lead of the mechanical pencil. [Fig.2]
- (3) To retract the lead, hold the top knob firmly and press the lead back into the pencil by pressing it against a hard surface such as the top of a desk.
- (4) To retract the pen tip, gently slide another lever.

#### <Ballpoint Pen>


- (1) Slide the lever of the color you wish to use, the tip comes out, and is set in place.
- (2) To retract the pen tip, gently slide another lever.





## How to refill mechanical pencil leads

 - (1) While holding the grip, unscrew and remove the barrel.
- (2) Hold the pen upwards and pull out the metal parts of the writing unit. [Fig.3]
- (3) Refill the lead. [Fig.4]
  - (No more than three replacement refills should be inserted to avoid jamming.)
- (4) Firmly insert the mechanical pencil's writing unit all the way in.
- (5) Reassemble the pen by firmly screwing the barrels.
- \* Please use only genuine PILOT products (0.5 mm) for the mechanical pencil's lead refills.





# How to replace a used ballpoint pen refill

- (1) While holding the grip, unscrew and remove the barrel.
- (2) Pull the empty refill out.
- (3) Firmly insert a new replacement refill all the way in.
- (4) Reassemble the pen by firmly screwing the barrels.
- \* The compatible refill for this ballpoint pen is the PILOT BVRF-8 (Acro-Ink).

#### Remarks

- Please do not use this product for any purpose other than writing.
- Handle with care because the point is sharp.
- Do not swallow the parts, such as the writing unit.
- Keep away from children.
- To prevent ink leakage, never write with the pen tip upwards.
- Avoid severe impacts or violent shaking because the ink may leak.
- Always retract the writing tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.
- Do not store in places exposed to direct sunlight or high temperatures.