

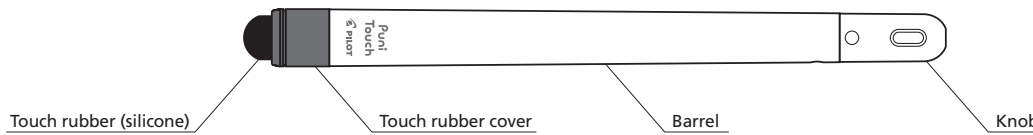


\ Reliable, safe, and easy-to-use touch pen. /


# Puni Touch / Use and Care Guide

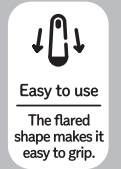


## How to replace the touch rubber

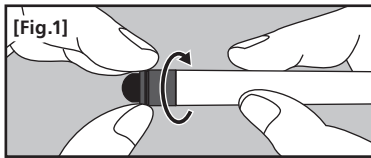


Remove the touch rubber cover by twisting it off while keeping the pen barrel steady. [Fig.1]

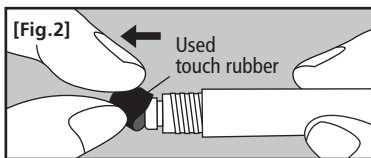

Firmly pinch the used touch rubber cover to remove it. [Fig.2]

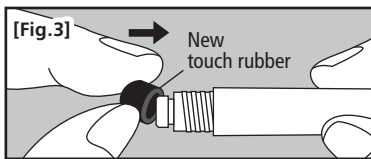

Securely attach a new touch rubber by placing it over the tip of the barrel. [Fig.3]

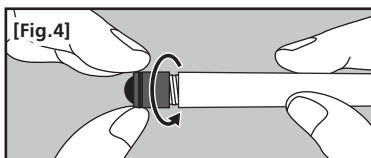

Attach the touch rubber cover by reversing the procedure shown in [Fig.1]. [Fig.4]

For a replacement, use the dedicated touch rubber **TPRU-1-B** (sold separately).

## Remarks

- Keep away from infants and small children.
- Do not place pen parts in the mouth because they may pose a risk of accidental ingestion or choking.
- This pen is designed for operating capacitive touch screens. Do not use it for any other purposes.
- Do not store in places exposed to direct sunlight or high temperatures.
- Do not hit or rub the touch screen forcefully with this pen, and do not use any part other than the touch rubber to operate the touch screen.  
This could result in scratches, damage, or malfunctions of the touch screen.
- Try to hold the touch pen upright while using it.
- The response and operating feel of the touch screen may vary depending on the device.
- When a protective film is applied to a touch screen, scratching sounds may occur while using the pen, and the touch screen's response may be slower depending on the type of film.
- The touch rubber on this pen is a consumable component. If the response becomes slower or the rubber breaks, it is a sign that replacement is needed.
- We are not liable for any device malfunctions, damage, or data loss that may occur as a result of using this product.